



















PROVISION ISR[®] Junction boxes









































Now you can see!

Model	Junction boxes	Installation
Dome  DI-VF	Wall A  PR-WB-A	IP66 IP64  PR-JB14IP66 PR-JB14IP64
	OR	Installation Wall B Ceiling Pole Corner  PR-WB14 PR-B10EX PR-CB14 PR-B10EX PR-B50PB PR-WB14 PR-B50ECB PR-WB14
Dome  DI-FIX	Wall A  PR-WB-A	IP66 IP64  PR-JB12IP66 PR-JB12IP64
	OR	Installation Wall B Ceiling Pole Corner  PR-WB12 PR-B10EX PR-CB12 PR-B10EX PR-B50PB PR-WB12 PR-B50ECB PR-WB12
Dome  DAI-VF	IP66 *  PR-JB14IP66	Installation Wall Ceiling Pole Corner OR Ceiling  PR-WB14 PR-B10EX PR-CB14 PR-B10EX PR-B50PB PR-WB14 PR-B50ECB PR-WB14 PR-ICB23
Dome  DAI-FIX	Wall A  PR-WB-A	IP66 *  PR-JB12IP66
	OR	Installation Wall Ceiling Pole Corner OR Ceiling  PR-WB12 PR-B10EX PR-CB12 PR-B10EX PR-B50PB PR-WB12 PR-B50ECB PR-WB12 PR-ICB21
Dome  FEI	IP66  PR-B50JB	Installation Wall Ceiling  PR-WB50 PR-B10EX PR-CB50 PR-B10EX

*** For DAI Installations, please remove the junctions box cover and connect the camera directly to the junction box**

PROVISION ISR[®] Junction boxes

Now you can see!

Model	Junction boxes		Installation							
Bullet  I6	IP66  PR-JB14IP66	IP64  PR-JB14IP64	Wall  PR-WB14	optional  PR-B10EX	Ceiling  PR-CB14	optional  PR-B10EX	Pole  PR-B50PB	optional  PR-CB14	Corner  PR-B50ECB	optional  PR-CB14
Bullet  I4	IP66  PR-JB12IP66	IP64  PR-JB12IP64	Wall  PR-WB12	optional  PR-B10EX	Ceiling  PR-CB12	optional  PR-B10EX	Pole  PR-B50PB	optional  PR-CB12	Corner  PR-B50ECB	optional  PR-CB12
Bullet  I2	IP66  PR-JB12IP66	IP64  PR-JB12IP64	Wall  PR-WB12	optional  PR-B10EX	Ceiling  PR-CB12	optional  PR-B10EX	Pole  PR-B50PB	optional  PR-CB12	Corner  PR-B50ECB	optional  PR-CB12
Dome  DMA	Wall A  PR-WB-A	OR  PR-B10BJB	Wall B  PR-WB12	optional  PR-B10EX	Ceiling  PR-CB12	optional  PR-B10EX				